

电脑	数码管	电机型号
操作地址d4.19		电机型号
K@	404.b	未设置电机型号
G0	3047	SMC60S-0020-30A■K-3LK□
G1	3147	SMC60S-0040-30A■K-3LK□
G2	3247	SMC80S-0075-30A■K-3LK□
GB	4247	SMC130D-0100-20A■K-4LKP
GO	4F47	SMC130D-0150-20A■K-4LKP
GP	5047	SMC130D-0200-20A■K-4LKP
GC	4347	SMC130D-0150-20A■K-4HKP

电脑	电机型号
60	SMC40S-0005-30M■K-5DS□
61	SMC40S-0010-30M■K-5DS□
62	SMC60S-0020-30M■K-3DS□
64	SMC60S-0040-30M■K-3DS□
67	SMC80S-0075-30M■K-3DS□
22	SMC60S-0020-30A■K-3DS□
24	SMC60S-0040-30A■K-3DS□
27	SMC80S-0075-30A■K-3DS□
2A	SMC130D-0120-30A■K-4DKR
2B	SMC130D-0150-30A■K-4DKR

GP	4447	SMC130D-0200-20A■K-4HKP	GO	4F47	SMC130D-0150-20A■K-4LKP
----	------	-------------------------	----	------	-------------------------

52	SMS60S-0020-30K■K-3DSU	KZ	5A4B	ISMH40S-0005-30A■K-4LKH
----	------------------------	----	------	-------------------------


57	SMS80S-0075-30K■K-3DSU	K0	304B	SMH60S-0020-30A■K-3LK□
----	------------------------	----	------	------------------------

K@	404.b	未设置电机型号
K0	304B	SMH60S-0020-30A■K-3LK□
K1	314B	SMC130S-0100-30A■K-3LK□
K2	324B	SMC130S-0150-30A■K-3LK□
K3	334B	SMC130S-0200-30A■K-3LK□
K4	344B	SMC130S-0100-30A■K-3LK□
K5	354B	SMC130S-0150-30A■K-3LK□
K6	364B	SMC130S-0200-30A■K-3LK□
K7	374B	SMC130S-0100-30A■K-3LK□
K8	384B	SMC130S-0150-30A■K-3LK□
K9	394B	SMC130S-0200-30A■K-3LK□

K@	404.b	未设置电机型号
K0	304B	SMH60S-0020-30A■K-3LK□
K1	314B	SMC130S-0100-30A■K-3LK□
K2	324B	SMC130S-0150-30A■K-3LK□
K3	334B	SMC130S-0200-30A■K-3LK□
K4	344B	SMC130S-0100-30A■K-3LK□
K5	354B	SMC130S-0150-30A■K-3LK□
K6	364B	SMC130S-0200-30A■K-3LK□
K7	374B	SMC130S-0100-30A■K-3LK□
K8	384B	SMC130S-0150-30A■K-3LK□
K9	394B	SMC130S-0200-30A■K-3LK□

K@	404.b	未设置电机型号
K0	304B	SMH60S-0020-30A■K-3LK□
K1	314B	SMC130S-0100-30A■K-3LK□
K2	324B	SMC130S-0150-30A■K-3LK□
K3	334B	SMC130S-0200-30A■K-3LK□
K4	344B	SMC130S-0100-30A■K-3LK□
K5	354B	SMC130S-0150-30A■K-3LK□
K6	364B	SMC130S-0200-30A■K-3LK□
K7	374B	SMC130S-0100-30A■K-3LK□
K8	384B	SMC130S-0150-30A■K-3LK□
K9	394B	SMC130S-0200-30A■K-3LK□

K@	404.b	未设置电机型号
K0	304B	SMH60S-0020-30A■K-3LK□
K1	314B	SMC130S-0100-30A■K-3LK□
K2	324B	SMC130S-0150-30A■K-3LK□
K3	334B	SMC130S-0200-30A■K-3LK□
K4	344B	SMC130S-0100-30A■K-3LK□
K5	354B	SMC130S-0150-30A■K-3LK□
K6	364B	SMC130S-0200-30A■K-3LK□
K7	374B	SMC130S-0100-30A■K-3LK□
K8	384B	SMC130S-0150-30A■K-3LK□
K9	394B	SMC130S-0200-30A■K-3LK□

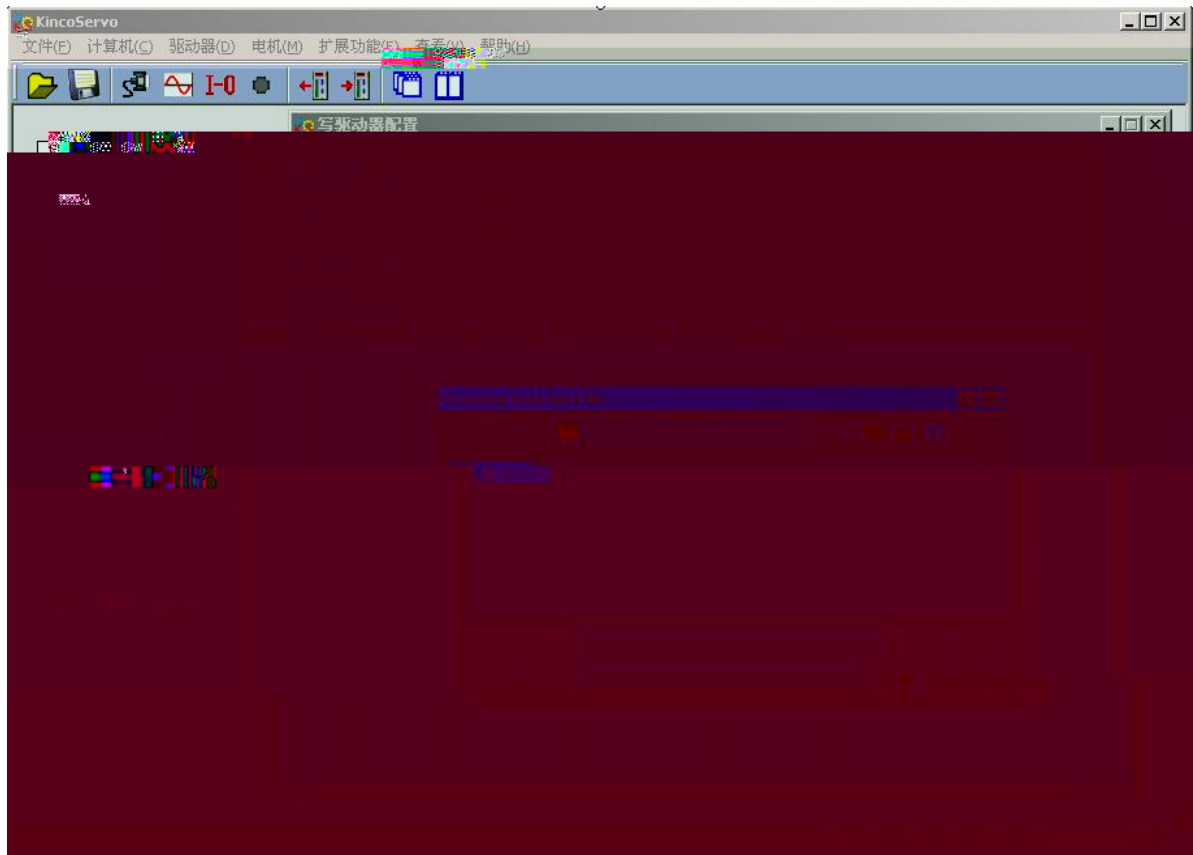

			<table border="1"> <thead> <tr> <th colspan="2">上位机 (公头)</th> <th colspan="2">驱动器 (母头)</th> </tr> </thead> <tbody> <tr> <td>RXD</td> <td>2</td> <td>5</td> <td>TXD</td> </tr> <tr> <td>TXD</td> <td>3</td> <td>1</td> <td>RXD</td> </tr> <tr> <td>GND</td> <td>5</td> <td>6</td> <td>GND</td> </tr> </tbody> </table>	上位机 (公头)		驱动器 (母头)		RXD	2	5	TXD	TXD	3	1	RXD	GND	5	6	GND
上位机 (公头)		驱动器 (母头)																	
RXD	2	5	TXD																
TXD	3	1	RXD																
GND	5	6	GND																
			<table border="1"> <thead> <tr> <th colspan="2">上位机 (公头)</th> <th colspan="2">驱动器 (母头)</th> </tr> </thead> <tbody> <tr> <td>RXD</td> <td>2</td> <td>2</td> <td>TXD</td> </tr> <tr> <td>TXD</td> <td>3</td> <td>3</td> <td>RXD</td> </tr> <tr> <td>GND</td> <td>5</td> <td>5</td> <td>GND</td> </tr> </tbody> </table>	上位机 (公头)		驱动器 (母头)		RXD	2	2	TXD	TXD	3	3	RXD	GND	5	5	GND
上位机 (公头)		驱动器 (母头)																	
RXD	2	2	TXD																
TXD	3	3	RXD																
GND	5	5	GND																
			<table border="1"> <thead> <tr> <th>上位机 (公头)</th> <th>驱动器</th> </tr> </thead> <tbody> <tr> <td colspan="2"></td> </tr> </tbody> </table>	上位机 (公头)	驱动器														
上位机 (公头)	驱动器																		
			<table border="1"> <thead> <tr> <th>上位机 (公头)</th> <th>驱动器</th> </tr> </thead> <tbody> <tr> <td colspan="2"></td> </tr> </tbody> </table>	上位机 (公头)	驱动器														
上位机 (公头)	驱动器																		

