

CM880A

名称	数据	单位	
1+ 当前电机型号	MC	A	
2 电机型号	MC	A	add
3 电机相数	2	p	del
4 电机极对数	50	2	help
5 电机相电流	3.000	A rms	
6 电机相电阻	0.100	Ohm	
7 电机相电感	0.100	mH	
8 电机扭矩	2.500	Nm	
9 电机转子惯量	0.750	kgcm ²	
10 电机旋转方向	0	DEC	
11 反馈精度	60000	DEC/rev	
12 上电自检电机参数	1	DEC	

Index: 0x641016
 Name: 当前电机型号
 Data Type: Unsigned16 RL
 Modbus address: 0x7160
 Operator Help:
 电机型号选择
 ASCII...HEX...型号
 00.....3030...无电机型号
 MC.....434d...自检电机参数
 XX.....5858...自定义电机参数
 A1.....3141...2S42Q-03848
 A2.....3241...2S42Q-02940
 A3.....3341...2S42Q-0240
 A4.....3441...2S42Q-0348(串联接法)
 A5.....3541...2S42Q-0348(并

```

*01*.....3142...2S56Q-02976
*02*.....3242...2S56Q-02054
*03*.....3342...2S56Q-02741
*04*.....3442...2S56Q-02741
*05*.....3542...2S56Q-0541(串联接法)
*06*.....3642...2S56Q-0541(并联接法)
*07*.....3742...2S56Q-0956(串联接法)
*08*.....3842...2S56Q-0956(并联接法)
*09*.....3942...2S56Q-1376(串联接法)
*10*.....4042...2S56Q-1376(并联接法)
*11*.....4142...2S56Q-2280(串联接法)
*12*.....4242...2S56Q-2280(并联接法)
*13*.....4342...2S56Q-2280(串联接法)
*14*.....4442...2S56Q-2582(串联接法)
*15*.....4542...2S56Q-2582(并联接法)
*16*.....3143...2S86Q-06988
*17*.....3243...2S86Q-05180
*18*.....3343...2S86Q-03865
*19*.....3443...2S86Q-051F6
*20*.....3543...2S86Q-03088...2S86Q-8588
*21*.....3643...2S86Q-03080...2S86Q-4580
*22*.....3743...2S86Q-01865...2S86Q-3465
*23*.....3144...2S110Q-054K1
*24*.....3244...2S110Q-047F0
*25*.....3344...2S110Q-03999
*26*.....3444...2S130Y-06388
*27*.....3544...2S130Y-03998
*E2*.....3245...2S130Y-03998
    
```


